

# Inter War Period

1915-1940



With the advent of the wireless, the gramophone and the motion picture industry, a whole new influence began to shape Australia's culture – American culture.

It seemed that Australia just couldn't get enough of all things American and soon the Californian bungalow was 'the house to have', with some small influence from the Mediterranean and the Spanish.

Throughout Europe as well, the high cost, highly decorated styles of previous eras were seen to be cumbersome and tiresome. They soon gave way to the streamlined new buildings that were almost devoid of all decoration and style and were sheer function alone.

Originating in Europe, the modern movement was the most potent architectural development during the inter-war decades, and it was effectively publicised by avant-garde critics and historians of the period.

## HOW TO ORDER YOUR MOULDING

Ordering your moulding is simple.  
We just need the answers to a few questions:

1. Are you painting or staining your moulding?  
This will determine which timber you choose.  
If you are painting, choose Pine or MDF.
2. Choose the appropriate timber species
3. Choose your moulding number
4. Work out the quantity required.

If you wish to match an existing moulding, we require:

1. A sample or "to scale" drawing
2. Timber species required
3. Quantity required

**Please call our friendly staff on 03 9808 5522 to help you with these questions.**

**Hazelwood  
& Hill**  
1931-2011  
**80years**

Phone 03 9808 5522  
[www.hazelwoodhill.com.au](http://www.hazelwoodhill.com.au)

18 McIntyre Street, Burwood Victoria 3125  
sales@hazelwoodhill.com.au • Fax (03) 9808 7226

1003




Mouldings are created from any species that are commercially available such as American Oak, Jarrah, Tasmanian Oak, Radiata Pine, Victorian Ash, Hoop Pine, Western Red Cedar and MDF. Mouldings can be painted or stained to suit your decor.

1065



1109

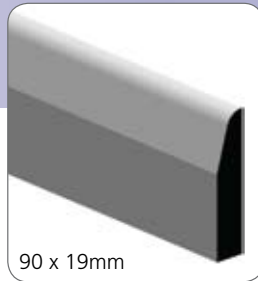

1113

